

K25 / K26 Series
GUIDE BOOK

K25 / K26 Series

INDEX

Function	4
K25 Material & Variation	5
K26 Material & Variation	6
Color Chart	7
Assembly Guide	8
User Guide	9



K26A-BS



K26B



K20B-1



 
K20B-2-BS

K25 / K26 Series



krede

Height Adjustment

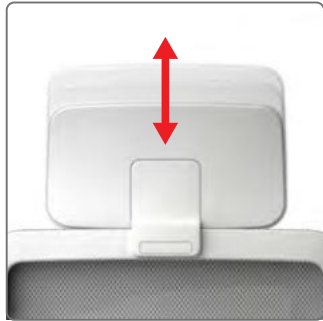

Adjust the height by sliding the headrest up and down.

LUMBAR SUPPORT

Height adjustable and naturally supports the waist with excellent tension.
(K26 only)



 
HIDDEN LEVER

Adjusting levers are hidden in each side of the seat aiming for the apparent simplicity.



WEIGHT BALANCE TILT

Without any separate adjustments, K25/K26 feels the weight of each sitter, and control the tension of tilting.

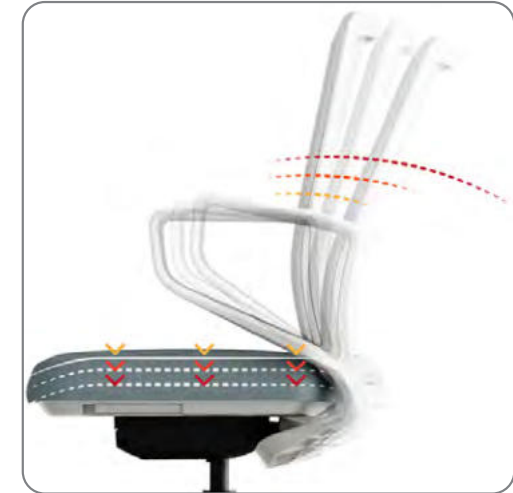

BASE & CASTER

K25/K26 is using engineering plastic starbase and urethane casters.



K25

TASK CHAIR



K25A



K25B



K25A-BS



K25B-BS

HEADREST - PA + GF30 frame + PU Foam - Artificial Leather upholstery	●	-	●	-
BACKREST - PA + GF30 frame - PE mesh upholstery	●	●	●	●
LUMBAR SUPPORT	-	-	-	-
ARMREST - PA + GF30 frame - Fixed type	●	●	●	●
SEAT - PP + GF30 frame - Fabric upholstered PU Foam	●	●	●	●
GAS CYLINDER - Optional stroke : 70mm / 110mm - Class 4	●	●	●	●
BASE , CASTER - 350 nylon base - 60mm PU caster	●	●	●	●
DIMENSION	W570x D585 x H1150~1215	W570x D585 x H995~1060	W570x D585 x H1150~1215	W570x D585 x H995~1060

The difference between K25 and K26 is in the presence or absence of a lumbar support.
K25 without a lumbar support
K26 with a lumbar support

K26

TASK CHAIR



K26A



K26B



K26A-BS



K26B-BS

HEADREST - PA + GF30 frame + PU Foam - Artificial Leather upholstery	•	-	•	-
BACKREST - PA + GF30 frame - PE mesh upholstery	•	•	•	•
LUMBAR SUPPORT - PP + GF30	•	•	•	•
ARMREST - PA + GF30 frame - Fixed type	•	•	•	•
SEAT - PP + GF30 frame - Fabric upholstered PU Foam	•	•	•	•
GAS CYLINDER - Optional stroke : 70mm / 110mm - Class 4	•	•	•	•
BASE , CASTER - 350 nylon base - 60mm PU caster	•	•	•	•
DIMENSION	W570x D585 x H1150~1215	W570x D585 x H995~1060	W570x D585 x H1150~1215	W570x D585 x H995~1060

The difference between K25 and K26 is in the presence or absence of a lumbar support.

K25 without a lumbar support

K26 with a lumbar support

K25 / K26

MESH BACKREST



BACKREST MESH

HY2078 series



BLACK
HY2078-06

 


L. GRAY
HY2078-07

VE series **




BLACK
VE-00

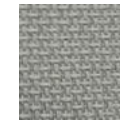

L. GRAY
VE-53

SEATREST FABRIC

 
HY19 series



BLACK
HY193B



 GRAY
HY192



BLUE
HY190



SKY BLUE
HY5028



GREEN
HY194



RED
HY191



 
BEIGE
HY5016

** There would be a price increase if VE-series is used. Please consult with KREDE.

Printed color could be different with the actual fabric color. Please check the actual swatch sample. .

step 01


Base and Gas Cylinder Assembly

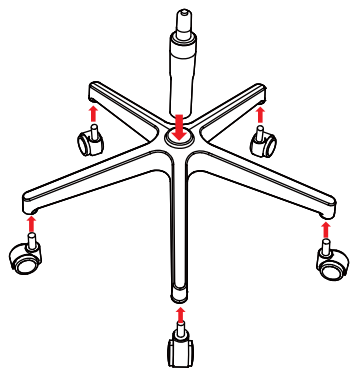

Put gas cylinder onto the base.
Assemble casters onto the base.

step 02

 
Backrest and Armrest Assembly

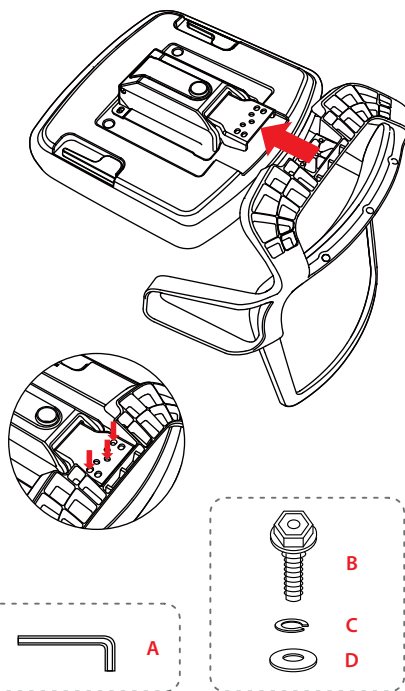

Assemble back-rest and tilt tightening bolts in order.
(B→C→D)
Tighten bolt using wrench (A).

step 03

 Base and Body Assembly

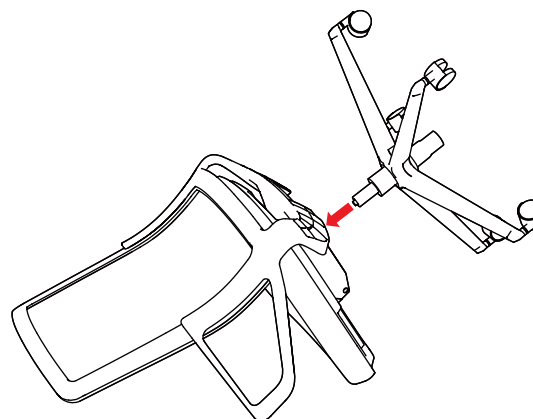


Complete the assembly of the seat and armrests and then
connect with gas cylinder by putting it
into the hole of tilt mechanism underneath the seat.

Assembly following as above image is recommended.

When the base is assembled, cautiously stand the chair upright.



step 04

 Headrest Assembly **

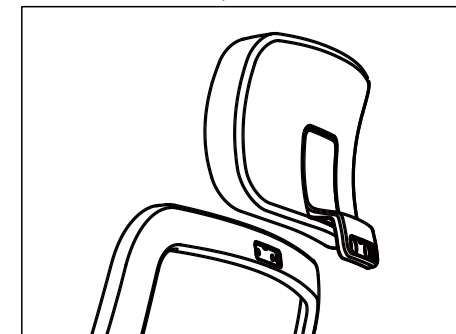


Assemble the headrest and backrest using bolts.
Tighten bolts(B) using a wrench(A).

  ** This only applies to the headrest type models.

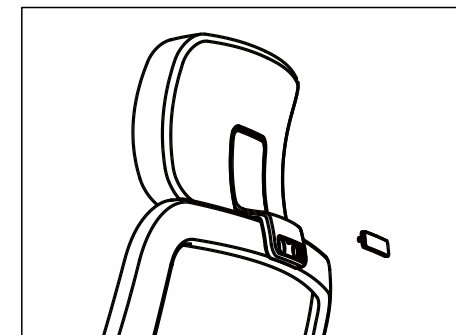


 Insert headrest cap while hole
on the cap heading upward.

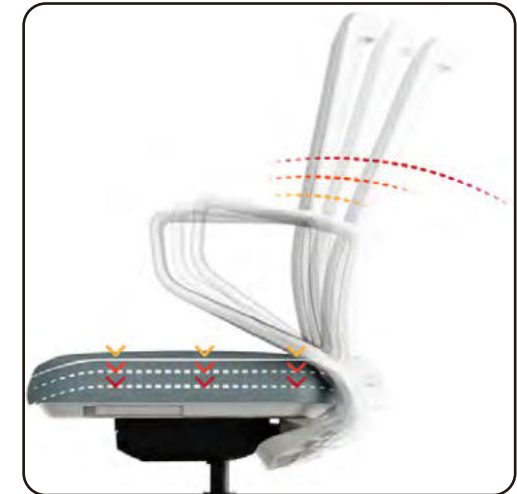


WEIGHT BALANCE TILT

 Without any separate adjustments, K25/K26 feels the weight of each sitter, and control the tension of tilting.

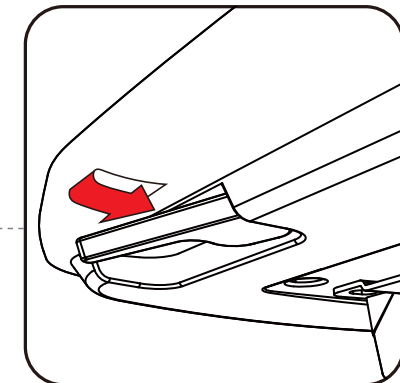

Tilt Lock

 Pull the left-hand side lever outwards to lock the backrest at the desired angle.

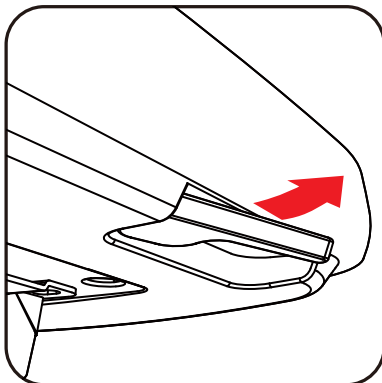

Adjusting the HEIGHT of seat

Height can be adjusted by pulling the right-hand side lever outwards while standing up or sitting.





krede

Warning

01. Do not use the chair for the purpose other than it originally meant to be.
02. Please be advised that the warranted weight capacity of the chair is 113kgs or less.
03. If you put excessive impact on the chair while tilted, it may be damaged.
04. Leaning on unfolded chair from behind could fold the chair and lead to injuries.
05. Do not press the backrest while someone is seated on the chair.
06. Do not push the chair when someone is seated.
07. Please do not use each chair more than two person.
08. Take care to avoid inserting your feet into the spaces of the seat.
09. Excessive weight may result in overturn and cause damage.
10. Do not put or insert your finger into any part of the chair.
11. Do not put your finger into the gap of the chair.
12. Avoid using the product while front of the seat is lifted.
13. When seating, please do not tilt your body left/right excessively.
14. Do not use the chair for exercise such as push-ups.
15. Do not throw the chair.
16. Do not kick the chair.
17. Do not walk across the chairs.
18. Please get full knowledge for usage of the chair beforehand for more proper use.
19. We do not apply any warranty for any possible injuries, dangers and damages caused by neglect of the above warnings.

CERTIFICATIONS



krede

#803, 171, Gasan digital 1-ro, Geumcheon-gu, Seoul, Republic of Korea

T 82 2 6254 5432

F 82 2 6254 5433

sales@krede.co.kr

www.krede.co.kr

** The dimension and design indicated here are subject to change depending on situations involved with product design and manufacturing.

2025.10.20 Ver.01